



Bluetooth Serial Adapter

Procedure

1. A 7-pin mini-DIN cable. For example, the Tensility 10-00543 will work.
2. A Bluetooth Serial Client Link Device. We used a device with a somewhat standard pinout. For example, both Adafruit (Bluefruit EZ-Link) and Sparkfun (Bluetooth Mate) sell devices that should work, as do other vendors.
3. 3.5V DC to DC converter. For simplicity, we used a UBEC device.

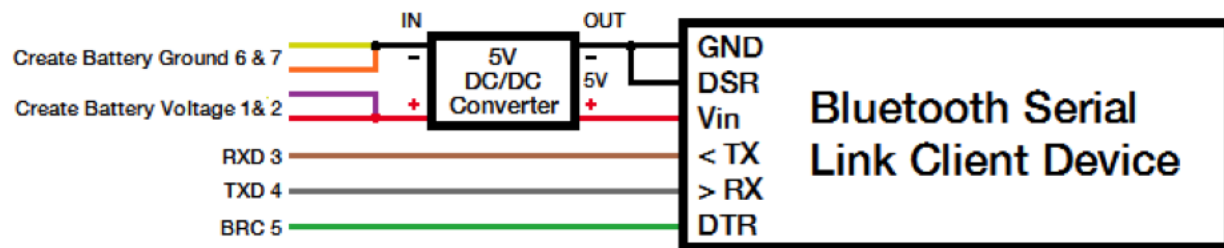

Picture, for clarity

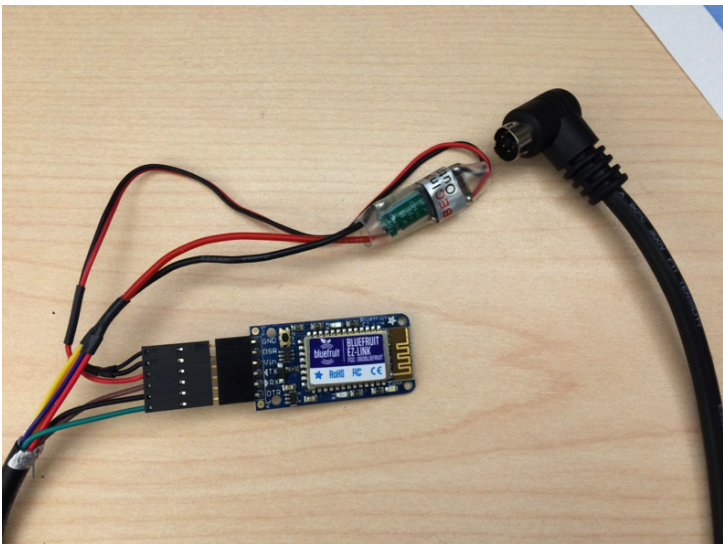

Connecting the serial device to your computer is dependent on the setup for the particular serial link client device purchased. Please consult the particular manufacturer's documentation for further details.

