


iRobot Create® 2 Tethered Driving Instructions for Windows

1. Download and unzip [CreateTetheredDriving.zip](#)
2. Connect USB Cable between Create and Windows PC
3. Launch CreateTethered.exe
4. COM Port can be found on Windows 7 with the following steps:


- a. Click Start



- b. In search box type “Device Manager” and Select it from above

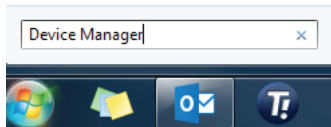

- c. Expand the Ports (COM & LPT) branch



- d. It will be the one that says “USB Serial Port (COM[X])”
- e. If you have more than one named you will have to try each one or unplug the Create 2 Cable and see which one disappears.

5. Enter COM Port (ex: COM3)
6. You will now be able to drive your Create 2. Bumper hits will halt the robot and will require the restart of the Windows Application.

